


COLOR MATCHED CAULKING

FOR .040/.060 WALL COVERING AND WALL PANELS

NOTE: MATERIAL MUST REACH 65° MIN. TO 75° MAX. 24 HOURS PRIOR TO INSTALLATION.

1. APPLY THE ADHESIVE AS DESCRIBED IN THE WALL COVERING INSTALLATION INSTRUCTIONS. ALLOW THE ADHESIVE TO CURE PROPERLY. (APPLIES TO ACROVYN WALL COVERING ONLY; PANEL ADHESIVE SHOULD BE APPLIED TO THE WALL PANEL AND INSTALLED WHILE STILL WET.)
2. INSTALL THE ACROVYN WALL COVERING PER THE INSTALLATION INSTRUCTIONS USING A SPACER NOT LESS THAN 1/16" THICK TO MAINTAIN AN EVEN JOINT WIDTH.
3. APPLY STRIPS OF MASKING TAPE ON EACH SIDE OF THE JOINT TO PREVENT EXCESS CAULKING FROM GETTING ON THE WALL COVERING.

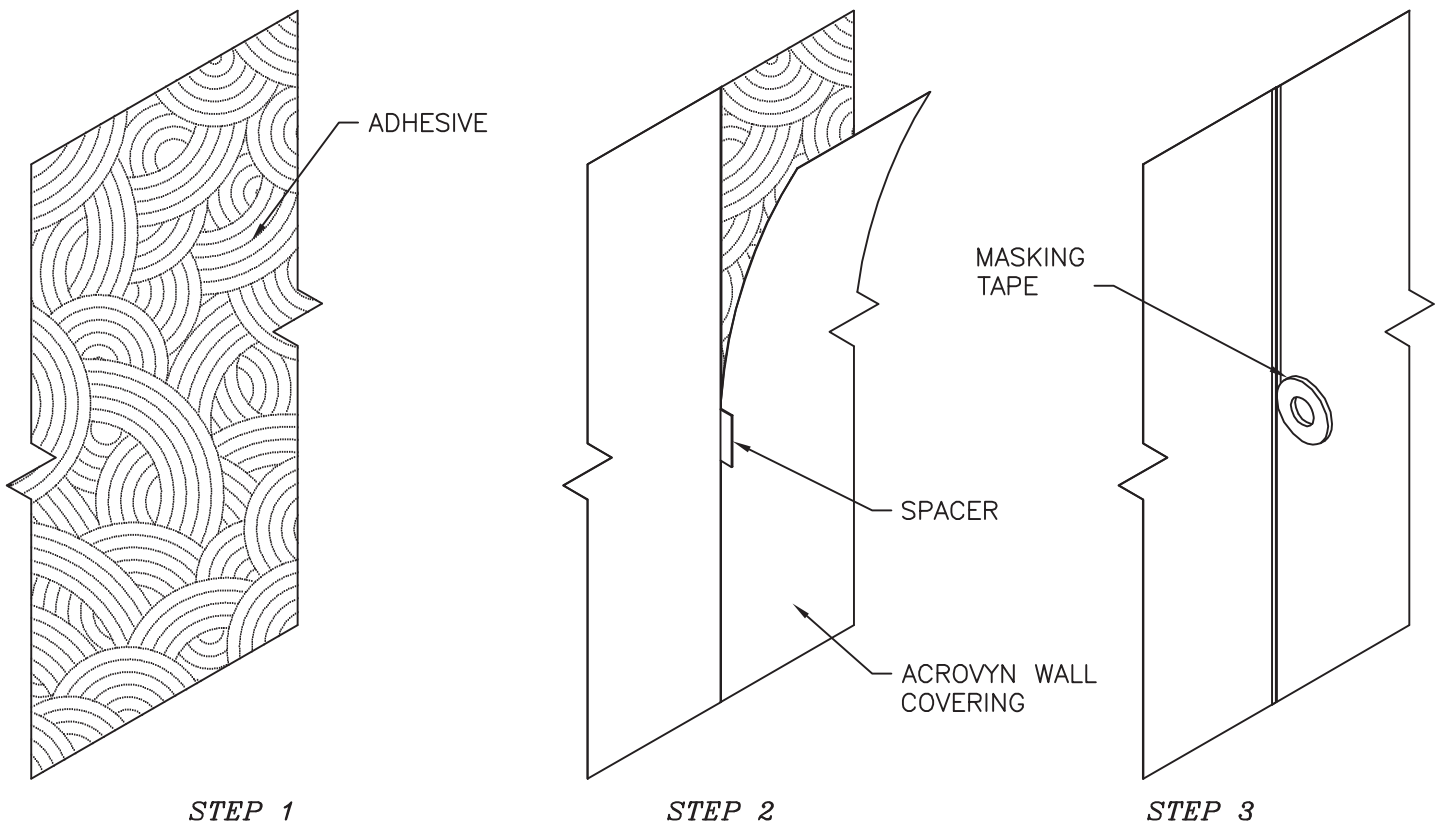


COLOR MATCHED CAULKING

4. APPLY ONE 1/8" BEAD OF COLORFLEX II CAULK TO THE WALL COVERING JOINT. BE CERTAIN THAT A SUFFICIENT AMOUNT IS APPLIED AND THE JOINT IS FILLED WITH CAULK. COVERAGE EQUALS 150' PER TUBE
5. SCREED OFF THE EXCESS CAULKING IMMEDIATELY SO IT IS FLUSH WITH THE SURFACE OF THE WALL COVERING.
6. REMOVE THE MASKING TAPE FROM BOTH SIDES OF THE JOINT.

NOTE: EXCESS CAULKING ON THE WALL COVERING SHOULD BE REMOVED AS SOON AS POSSIBLE WITH WARM WATER AND A CLEAN CLOTH.

OPTIONAL: IN CERTAIN APPLICATIONS A SECOND "TOP COAT" OF COLORFLEX CAULK IS REQUIRED. THE SECOND COAT IS IDENTIFIED ON THE CARTRIDGE AS COLORFLEX "TOP COAT". PLEASE FOLLOW THE SAME INSTALLATION PROCEDURE WHEN APPLYING THE SECOND COAT. ALLOW A MINIMUM OF FOUR HOURS TO CURE BEFORE APPLYING THE SECOND TOP COAT.

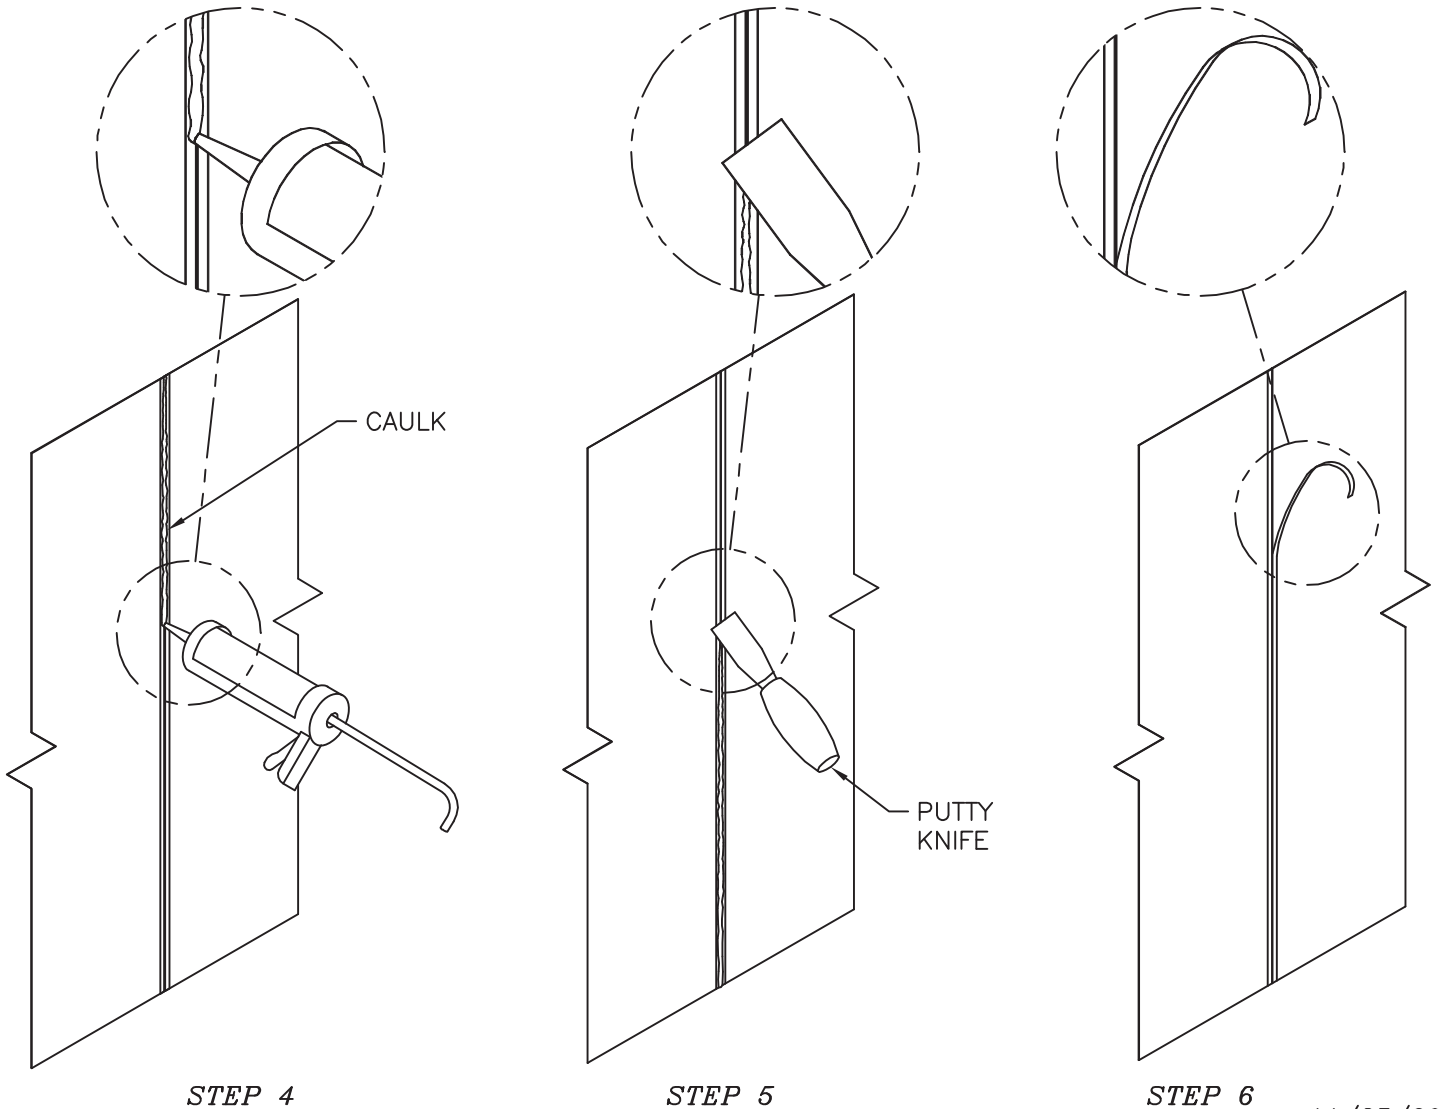

11/25/09