

General Information

Open the manufacturer's template kit. Be careful not to damage the box as this will be reused. Materials included inside are:

- Written template preparation instructions
- 2" wide masking tape
- Reinforced kraft paper

If you discover that material is missing or defective, contact our customer service department immediately: **800.233.8493**

Important Notes - Do Not Overlook

Prior to starting, be sure the template area is:

- Free of dirt, debris and moisture
- Finished with further construction and represents the exact mat/grid layout
- Flooring is flat and depth is consistent throughout


Tools Required

You will need PPE equipment, a utility knife with new blades and a permanent marker

Instructions



1 Lay reinforced template paper in the area. Use the straight edge of the paper as a dominant straight edge of the mat.

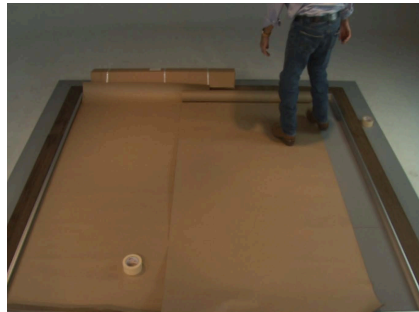

2 Overlap the paper approximately 6" at each seam. Do not butt paper together.




3 Use 2" tape to affix the pieces together at 24" on center, as shown.



4 Label top of template with traffic direction.



5 Place hash marks across overlaps to aid in reassembly at the factory.

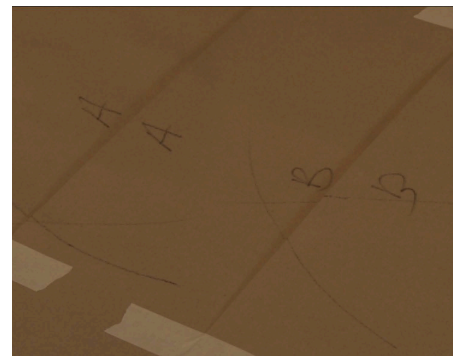

6 Mark each section separately to identify the order. If possible, include a sketch of the orientation of sections and mark numbers.

Instructions (continued)



7 Trim the overlap to the exact edge of the area.



8 Template can now be broken down. Use a utility knife to cut the tape at the overlaps.



9 Record project information, i.e. template maker, job name, job number, phone number. Include split location if the template exceeds 12'.



10 Template can now be broken down. Slide pieces together into its original 4' long roll.



11 Roll the stacked paper tightly to fit inside its original box.
Do not fold the template.



12 Fold a flap onto the tape for easy removal. Place template into the return box.



13 Return to:
Construction Specialties, Inc.
Attn: EFS Drafting Department
6696 State Route 405
Muncy, PA 17756