

General Information

Open the pack list on the crate's exterior. Locate the shop drawings and installation instruction inside the box. Review contents and make sure all parts are present. For a rectangular installation, the pack list will include the number of modules and frame pieces. For odd-shaped installations, a drawing will be supplied identifying the module layout in numbered sequence.

If you discover that material is missing or defective, contact our customer service department immediately: **800.233.8493**

Important Notes - Do Not Overlook

Prior to installation, ensure that the material is stored indoors and has acclimated to the environment's temperature for 24 hours.

Assess the site condition prior to installation ensuring the recess is:

- Free of debris and moisture
- The correct depth throughout
- Smooth and flat

High spots should be ground down. Low spots should be filled with a self-leveling grout. The side walls of the recess should also be checked for plumb and defects as this could affect the frame installation (if applicable). If these conditions have been met, you can begin the installation.

Tools Required

You will need a level, rubber mallet, 5/16" masonry drill bit, flathead screwdriver, #2 Phillips-head screwdriver, tape measure, carpenter's pencil or marker, shop vacuum, PPE (gloves, glasses, ear protection, etc.) and a trowel.


Installation Instructions



1 Each frame has welded tabs with holes for mounting.



2 Begin dry-fitting all frame pieces into the recess.

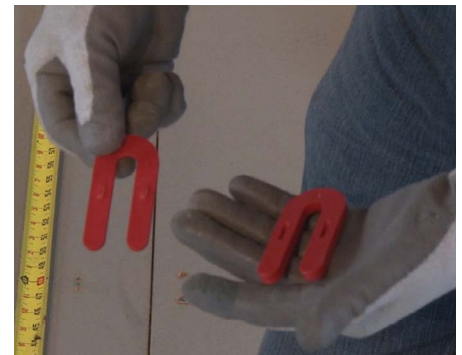

3 It may be necessary to use shims to set the frame flush with the finished floor.

Installation Instructions (continued)



4 The shims are available in different thicknesses and are stackable to achieve custom thicknesses.



5 Use a 5/32" masonry bit to drill into the substrate at each welded tab hole for the anchor.



6 Fasten the supplied masonry anchors into the pre-drilled holes to attach the frame.




7 To make the sub-floor level with the bottom frame leg, use non-shrink grout (Quikrete 1585 or similar) and trowel flush with the top of the bottom leg of the level base frame. The recess should be smooth and flat.



8 Use a rag to clean the excess grouting from the top of the frame leg. Allow 24 hours for the grout to dry before continuing with the installation.




9 Dry fit all grid modules into the area per the supplied shop drawings.

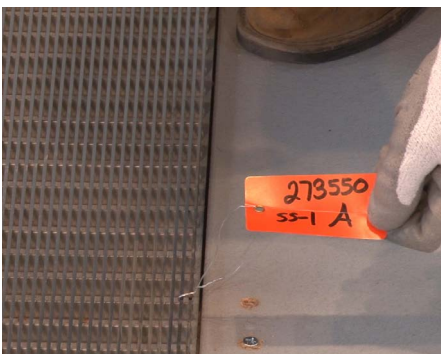

10 Each module is tagged identify a specific location per drawing.



11 Adjust each module to ensure consistent spacing and alignment.

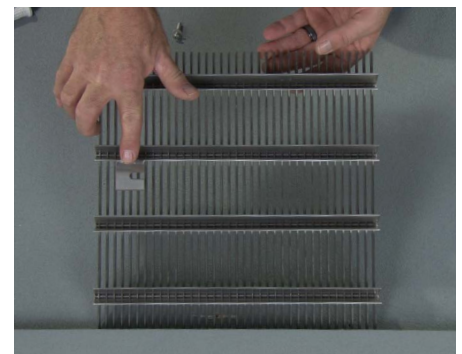

12 GridLine 2 has a welded tab lockdown for securing the grid to the recess.

Installation Instructions (continued)



13 To begin locking down the grid, make sure the grid modules are aligned and transfer the mark for the anchor to the substrate using a 1/8" drill bit or a center punch tool. repeat for each lockdown location.



14 Remove the grid panel and begin drilling the lockdown holes using a masonry bit. Drill a 3/8" hole, 5/8" deep.



15 The lead shield and setting tool are shown here. The shield's cone installs into the hole first.



16 Insert the lead shield with the cone portion going into the hole first.




17 Use the setting tool to lock the shield.



18 Insert the mounting (or fastening screw) into the welded tab lockdown. Use a piece of electrical tape to hold the screw in place.



19 Repeat for each lockdown location.

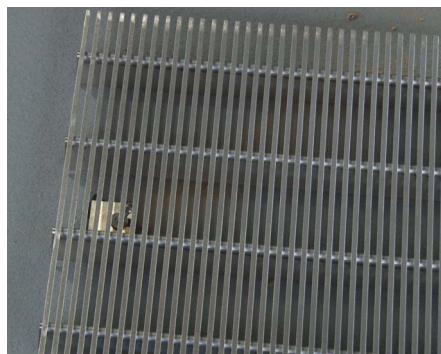

20 To finish the grid panel installation, flip the grid over and align all screws into the lead shields.



21 Beginning in the center of the grid module and working your way out to the edges, start the screws using an 1/8" Allen wrench.

Installation Instructions (continued)




22 Go back to the center and lightly draw down the screws, working your way out to the edges.



23 Go back to the center and tighten the screws, working your way out to the edge. Repeat this process for the remaining modules.



24 Repeat each step for all remaining modules.

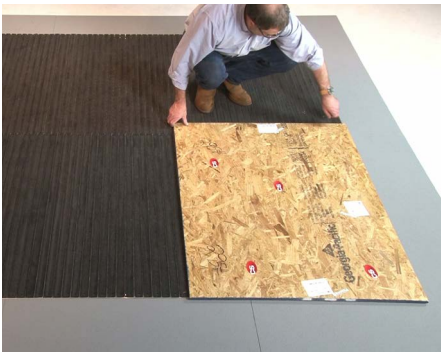

25 If building construction is to continue, protect the grid with plywood sheathing.



26 Care & Maintenance: Once the installation is complete, use denatured alcohol to clean with a mop.