

## General Information

Open the pack list on the crate's exterior. Locate the shop drawings and installation instruction inside the box. Review contents and make sure all parts are present. For a rectangular installation, the pack list will include the number of modules and frame pieces. For odd-shaped installations, a drawing will be supplied identifying the module layout in numbered sequence.

If you discover that material is missing or defective, contact our customer service department immediately:  
**800.233.8493**

## Important Notes - Do Not Overlook

Prior to installation, ensure that the material is stored indoors and has acclimated to the environment's temperature for 24 hours.

## Tools Required

You will need a tape measure, carpenter's pencil or marker, utility knife, shop vacuum, PPE (gloves, glasses, ear protection, etc.) and a carpenter's square.


## Installation Instructions



**1** Begin by placing the pre-mitered tapered aluminum frame in the correct location.



**2** Prepare the finished floor surface to allow the tape to properly bond to the floor.

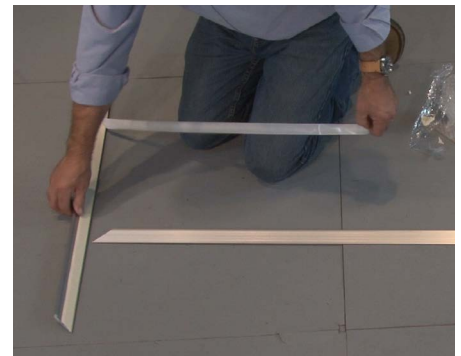

**3** Remove backing from the double-sided tape.



**4** Apply the frame to the substrate.



**5** Make sure the frame is square and the miters butt properly.



**6** Firmly press down on the entire length of the frame to activate the tape.

## Installation Instructions (continued)



**7** After the frame is in place, proceed with the product installation.




**8** For layout sequence of the mat units with multiple sections, refer to the shop drawings and the mark numbers placed on the backside of the mats.



**9** Unroll the mats and place into the recess per the drawing layout.



**10** Align the mat into the recess.

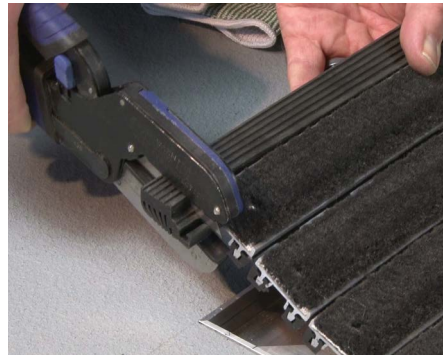

**11** Cut the oversized end trim flush to the edge of the rail.



**12** For proper overall fit, adjust the end trim using a utility knife with a new, sharp blade. Remove excess trim equally at both ends. The end trim has grooves every 1/8" that you can use to run the blade across.



**13** For beginners: we recommend using a straight edge to assist in cutting an accurate line. Once the end trim is adjusted, tuck the mat into the recess and push flat.



**14** Repeat steps 8 -12 for adjacent sections.



**15** Scuff or drag your heel to align the mat. It may be necessary to lift and flap/shake the mat for final alignment.

## Installation Instructions (continued)



**16** Clean the unit with a vacuum.



**17** If construction is to continue in the building, protect the unit with plywood sheathing.



**18** Care & Maintenance: to properly clean underneath the mat and avoid rail damage, roll back the mat edge to the 12th rail. Continue to roll back the mat holding that diameter.