





## INSTALLATION INSTRUCTIONS PEDIMAT, PEDIMAT AA, & TREADLINE WITH SURFACE MOUNTED TAPERED VINYL FRAME

### 1.) SITE PREP

- CLEAN THE FLOOR SURFACE TO REMOVE ALL DIRT, OILY FILM, AND DEBRIS.

### 2.) VELCRO ANCHOR APPLICATION INSTRUCTIONS (MATS OVER 144" WIDE)

- CLEAN THE AREA ON THE BACK OF THE RAIL TO RECEIVE THE HOOK AND LOOP FASTENER. ALCOHOL OR A SIMILAR SOLVENT IS SUGGESTED. IT IS NECESSARY TO REMOVE THE CENTER LEG ON TREADLINE OR PEDIMAT UNITS.
- PEEL THE BACKING FROM THE HOOK PORTION OF THE FASTENER AND LOCATE AT 18" (.46M) O.C. NEAR THE RAIL EDGE.
- CLEAN THE AREA OF THE FLOOR TO RECEIVE THE LOOP PORTION OF THE FASTENER. SECURE THE VELCRO TO THE FLOOR WITH A MASONRY ANCHOR AT EACH END. THIS SHOULD FALL DIRECTLY UNDER THE HOOK PORTION INSTALLED.
- WHILE LIFTING ONE EDGE OF THE UNIT, SLIDE IT OVER SO WHEN YOU LAY IT DOWN, THE LOOP PORTION WILL INTERLOCK WITH THE HOOK. ALL OTHER SECTIONS SHOULD BE ROLLED INTO PLACE GRADUALLY, LINING THE RAILS UP BETWEEN THE VELCRO PATCHES.

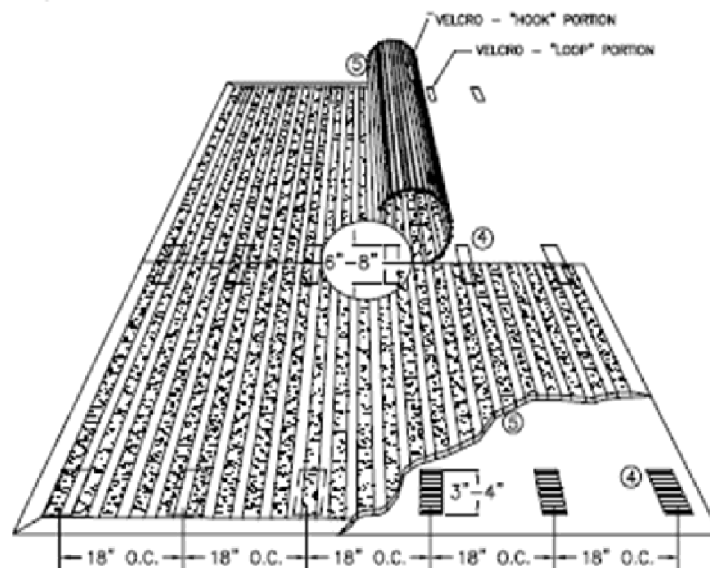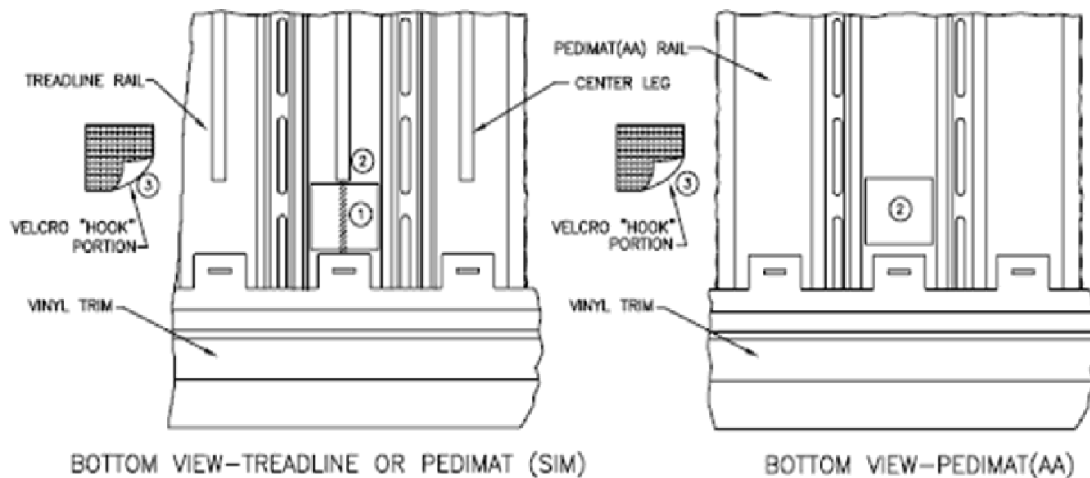



## INSTALLATION INSTRUCTIONS PEDIMAT, PEDIMAT AA, & TREADLINE WITH SURFACE MOUNTED TAPERED VINYL FRAME

### 3.) CLEANING AND MAINTENANCE INSTRUCTIONS FOR PEDISYSTEMS

- MANUFACTURER'S SUGGESTED SAFE ROLLING LOAD FOR 350# PER WHEEL.
- HEAVY LOADS BEYOND THIS WEIGHT MAY DAMAGE THE UNITS, CONTRIBUTING TO THEIR PREMATURE FAILURE OR CREATING A TRIPPING HAZARD.
- VACUUM SURFACE REGULARLY WITH BEATER BRUSH ATTACHMENT TO ALLOW CONTACT WITH VARIOUS SURFACES OF ENTRANCE FLOORING.
- BEFORE DEEP CLEANING THE SURFACE, ROLL UNIT BACK TO REMOVE DIRT COLLECTED UNDERNEATH AS NEEDED. DIRT SHOULD BE REMOVED WITH PROFESSIONAL VACUUM CLEANER AND SHOULD NOT BE ALLOWED TO BUILD UP TO THE POINT WHERE A LEVEL MAT SURFACE IS AFFECTED.
- DEEP CLEAN QUARTERLY, EITHER BY REMOVING UNIT TO AN AREA WHERE IT CAN BE CLEANED WITH A POWER WASHER (ON LIGHT SETTING TO AVOID CARPET DAMAGE) OR.
- SHAMPOO THE UNIT IN PLACE (SOAP/WATER EXTRACTION)
- IT IS RECOMMENDED THAT SHAMPOOING TAKE PLACE OVERNIGHT TO ALLOW CARPET FIBERS TIME TO DRY THOROUGHLY BEFORE HEAVY TRAFFIC RESUMES.
- SUGGESTIONS FOR PRE-TREATING THE AREA PRIOR TO SHAMPOOING.
  - REMOVE GUM OR OTHER STICKY SUBSTANCES BY APPLYING A COMMERCIAL FREEZE SPRAY TO THE AFFECTED AREA. THIS SHOULD ALLOW THE RESIDUE TO BREAK OFF EASILY.
  - FOR GROUND -IN DIRT SHOWING IN HIGH TRAFFIC AREAS, ADD ONE CUP OF BLEACH PER GALLON OF WARM WATER AND USE STIFF BRUSH TO PRE-TREAT CARPET FIBERS.
  - IF ALUMINUM NEEDS CLEANED, USE STIFF NYLON BRISTLE BRUSH TO CLEAN WITH SHAMPOO MIXTURE PRIOR TO SHAMPOOING ENTIRE UNIT.
- TO ACHIEVE THE MOST EFFECTIVE SUCTION OF THE SHAMPOOER, RUN THE WAND PERPENDICULAR TO THE RAILS AND NOT ALONG THE LENGTH OF THE CARPET STRIPS.
- TAKE CARE WHEN MOPPING SURROUNDING FLOOR AREA. KEEP MOP AWAY FROM MAT OR GRID. THE AGGRESSIVE TEXTURE OF THE CARPET INSERTS MAY GRAB LINT WHEN THE MOP COMES IN CONTACT, POTENTIALLY CAUSING UNSIGHTLY LINT COLLECTION AT EDGES OF UNIT.
- REPLACEMENT INSERTS ARE AVAILABLE - SEE [WWW.PEDISYSTEMS.COM](http://WWW.PEDISYSTEMS.COM) OR CALL 1-570-546-5941 FOR MORE INFORMATION AND FOR CONTACT INFORMATION FOR YOUR LOCAL REPRESENTATIVE.



Fast Access to Online Resources



Muncy, Pennsylvania • (800) 233-8493 • Fax (570) 546-5169  
Mississauga Ontario • (888) 895-8955 • Fax (905) 274-6241  
[www.c-sgroup.com](http://www.c-sgroup.com)

REV DATE: 7/30/12