

General Information

Open the pack list on the crate's exterior. Locate the shop drawings and installation instruction inside the box. Review contents and make sure all parts are present. For a rectangular installation, the pack list will include the number of modules and frame pieces. For odd-shaped installations, a drawing will be supplied identifying the module layout in numbered sequence.

If you discover that material is missing or defective, contact our customer service department immediately: **800.233.8493**

Important Notes - Do Not Overlook

Prior to installation, ensure that the material is stored indoors and has acclimated to the environment's temperature for 24 hours.

Assess the site condition prior to installation ensuring the recess is:

- Free of debris and moisture
- The correct depth throughout
- Smooth and flat

High spots should be ground down. Low spots should be filled with a self-leveling grout. The side walls of the recess should also be checked for plumb and defects as this could affect the frame installation (if applicable). If these conditions have been met, you can begin the installation.

Tools Required

You will need a level, rubber mallet, tape measure, shop vacuum, PPE (gloves, glasses, ear protection, etc.) and a trowel.

Installation Instructions



1 The location and all materials must acclimate to a minimum of 68 degrees prior to the installation.



2 Remove installation instructions, lifting tool and shop drawings from box.




3 Remove the Floorometry tiles from the box. Custom cut tiles are labeled and correspond to your custom shop drawings. Full size tiles are not labeled.

Installation Instructions (continued)



4 Do not detach top surface of Floorometry tile from its mud plate. It is to be installed as one piece.

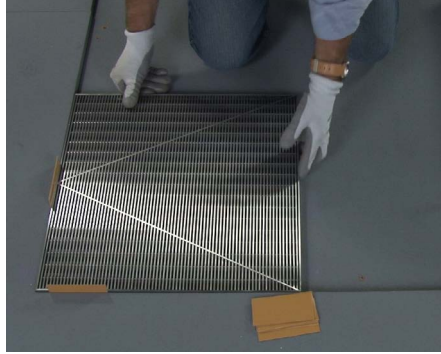


5 Dry fit tiles. They must be flush with adjacent finished floor and flat across the surface. Use a rubber mallet to tap the tiles together.



6 Use the shims provided between each tile, as well as the perimeter.



7 Ensure that each shim is snug and that each tile is accurately aligned.

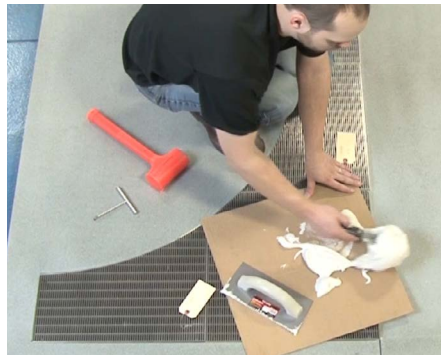

8 Remove one row of tiles, apply adhesive and replace tiles. Refer to the adhesive manufacturer's instructions for trowel and substrate requirements.



9 Continue to remove one row of tiles at a time and apply adhesive.



10 After finishing the installation, be sure to clean any adhesive from the top surface of the tiles.




11 Use a straightedge to ensure each tile is flush to adjacent tiles and finished floor.




12 Remove shims once the adhesive has cured. Clean the installation with denatured alcohol.

Installation Instructions (continued)

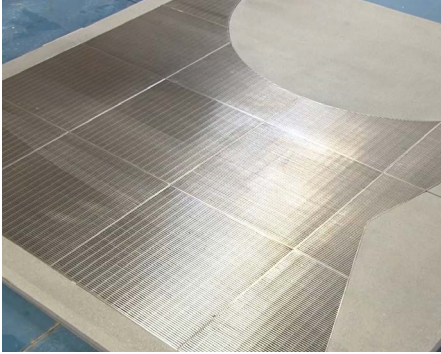

13 If construction is to continue, cover the installation with plywood sheathing.

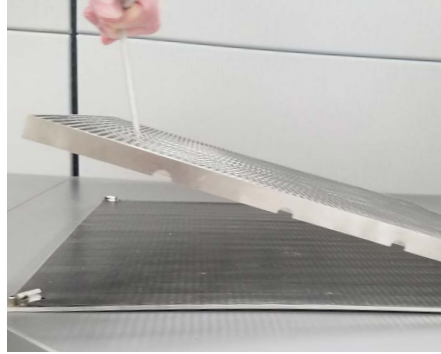

14 Care & Maintenance: to remove module for cleaning, insert the lift key tool into the drain slot and lift.